

Here's how it works...

On the Setup page, select the Macro A tab. Enter a name for the first macro (or leave the name as Macro1). Enter a string of relay numbers to turn on, and/or a string to turn off. The relay codes must be two digits, and are one number less than the relay number, ie. Relay 1=00. Use a comma between relays, and a semi-colon at the end. Don't use spaces.

For instance, to turn on relays 1 thru 3, type 00,01,02; in the On box To turn off the same relays, type in the Off box instead.

If you type in both On and Off boxes, you can turn on some relays and at the same time turn off others, for instance...

On box = 00,01,02; and Off box = 06,07; would turn on relays 1-3 and turn off relays 7&8.

If you enter the same relays in both boxes, it will cause those relays to toggle each time you click the button for that macro, BUT be careful that you don't use those relays for anything else, or they could get out of sequence. It's safer to not use the same relays in both boxes, but you should be able to use the toggle function with a little care.

You can click on the status buttons for the relays instead of a macro button if you want to toggle that relay only, but you'll have to remember what the relay controls. The status buttons work like the old relay buttons, but don't have names... just numbers. You should program macros for all the functions you used to use.